

U.S. Master Distributor



Display Source Inc.
displaysourceinc.com
888-756-5447
service@displaysourceinc.com



TV CUTOUT
FINISHING
INSTRUCTIONS



FINISHED FRAME



FINISH FABRIC TO OUTER FRAME

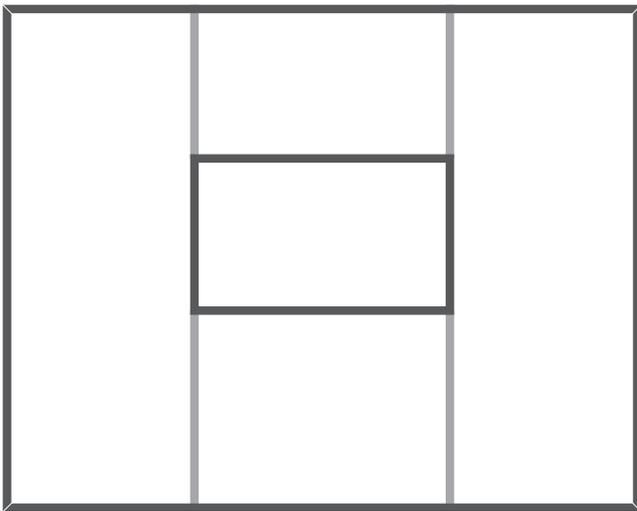


Fig 1

1

Fig 1 shows the completed skeleton of the frame including the frame for the tv.

2

To Begin finish the fabric as normal to the outer frame [\(for more information on finishing fabric, see instruction guide\)](#)

Ignore the tv cutout for the moment and fit the fabric [\(Fig 2\)](#)

Ensure the fabric fits and that there are no creases



Fig 2

FINISH CUTOUT FOR TV

REAR

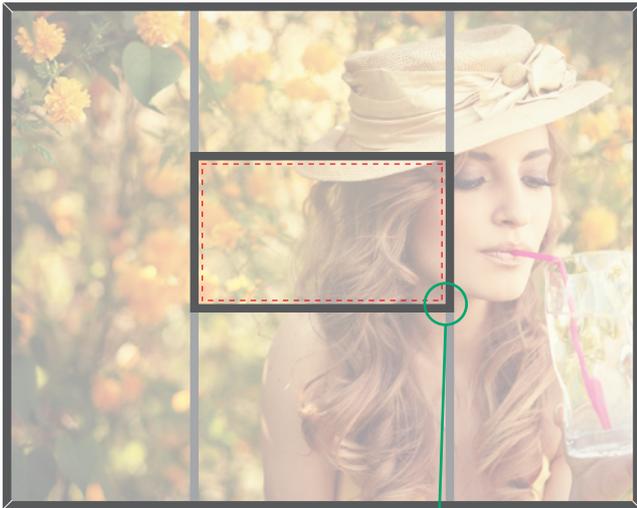


Fig 3

3

With the Fabric in place, measure and mark 14mm (9/16 Inch) in from the edge of the tv cutout on the rear of the fabric (Fig 3). Ensure the measurements are made from the edges of the channel (Fig 4)

4

Once Marked cut the fabric (Fig 5) and sew on the Silicon Gasket (Fig 6 & 7). Ensure the Gasket is cut at a 45° angle in the corners (Fig 8), the Fabric should not be cut at this point

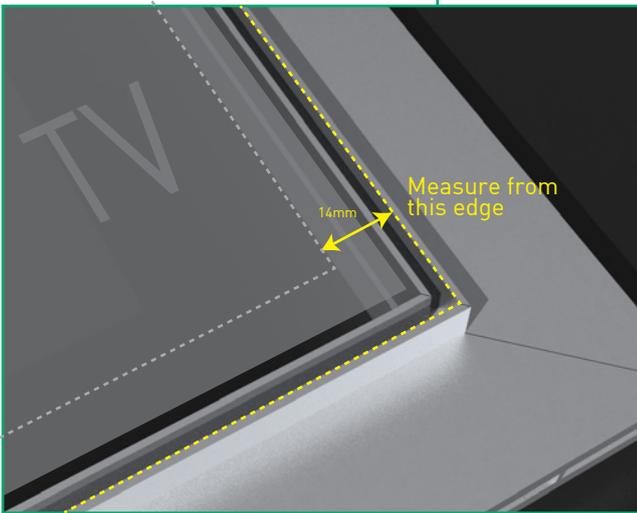


Fig 4

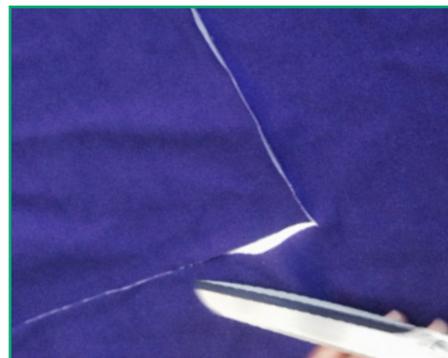


Fig 5



Fig 6



Fig 7



Fig 8

FIT FABRIC & TRIM CORNERS



Fig 3

5

Fit the Fabric to the outer frame as before, gently push the gasket into the tv frame ensuring the fabric is finished at the correct size, and that all the corners line up. Once you have confirmed that the corners are in the correct position cut the fabric in each corner at approx 45° to ensure the fabric can be fully inserted (Fig 3)

6

Fit the Fabric ensuring there are no creases.



FINISHED FRAME

